


# VISUAL-PAGER CONNECTION DIAGRAM



## Using 16 or 18 AWG Paired Wire

The VISUAL-PAGER may be connected with common 16 or 18 AWG paired wire utilizing the terminal blocks located at the back of the remote displays and under the small slide-on cover of the Model 904 Keypad.


**Model 930 Remote Display**

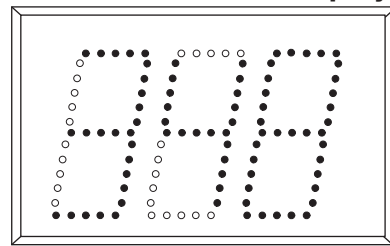



REAR VIEW

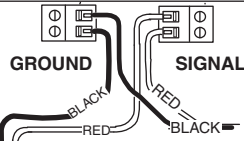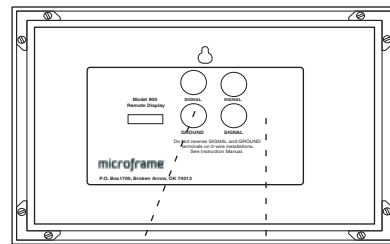


**Model 920 Remote Display**

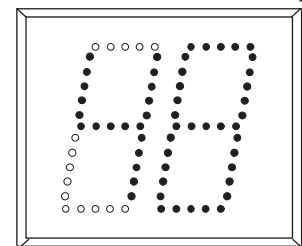


REAR VIEW

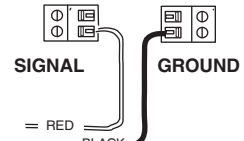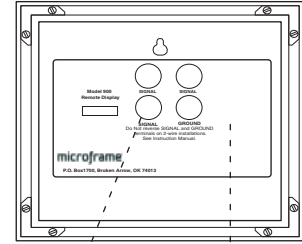

SEE NOTE

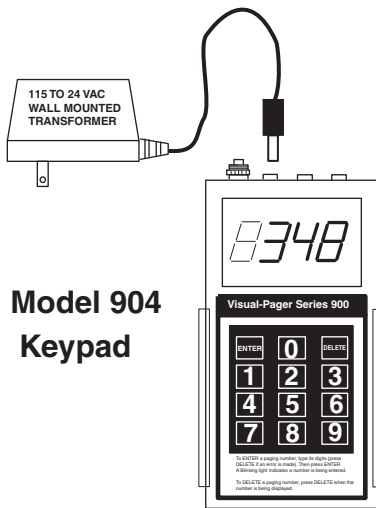

**Model 904 Keypad**

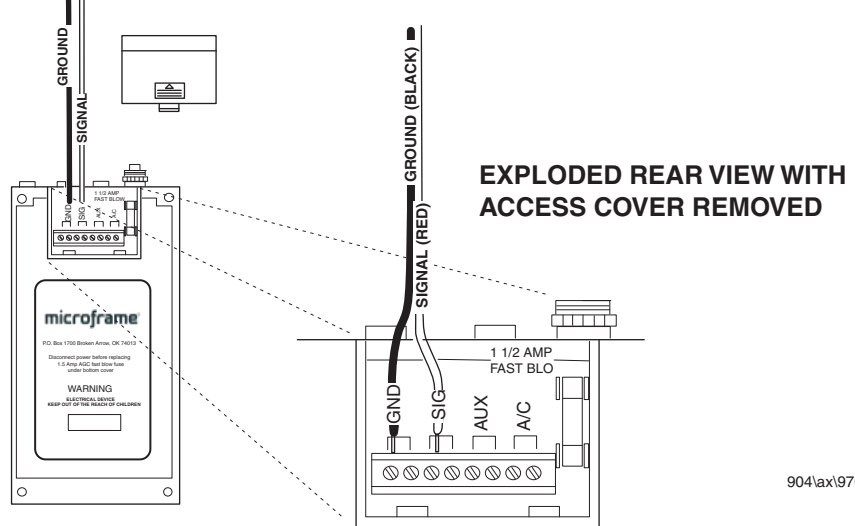

904\ax\9702.DRW

**NOTE:** The Model 920 **SIGNAL** connection is on the Left and **GROUND** is on the Right. On the Model 930, 940 and 960, the **SIGNAL** connection is on the RIGHT and **GROUND** is on the LEFT.