

Specification Sheet

microframe®

**Model 4520, 4530,
4540, and 4560
Wi-Fi
Visual-Pager®
Display**



Model 4520 shown

Features

The Model 4520, 4530, 4540, and 4560 Wi-Fi Visual-Pager® Displays are designed to show and rotate through one 2-, 3-, 4-, or 6-digit number at a time. The display has 5.5-inch tall digits viewable up to 125 feet and is encased in an extruded aluminum case. Optional ceiling mounts are available in a single, double, or triple cluster for easy mounting in the center of or around the peripheral of a large retail area. Outdoor displays are also available with sunlight brightness for easy viewing.


Operation

The Wi-Fi Visual-Pager® Displays are designed to work with any Wi-Fi network. The displays have two modes:

- 1) As a "Wi-Fi Visual-Pager®," the display will store and rotate up to 20 numbers at a time. Numbers can be entered and deleted from the display using the internally served webpage or via an Apple or Android app.
- 2) The device can also be used in Hymn Mode. This allows someone to enter a list of numbers and advance through the list one by one.

Model 4520, 4530, 4540, and 4560 Wi-Fi Visual-Pager® Display Specifications

Frequency	2.5 GHz
Mounting	Wall or Ceiling Mount
Character Height	5.5"
Viewing Distance	125' indoors
Power Requirements	24VAC 1.2A, adapter requires 115 Volts AC @ .72A
Weight	4520 (2.5 lbs), 4530 (3 lbs), 4540 (3.5 lbs), 4560 (5.25 lbs)

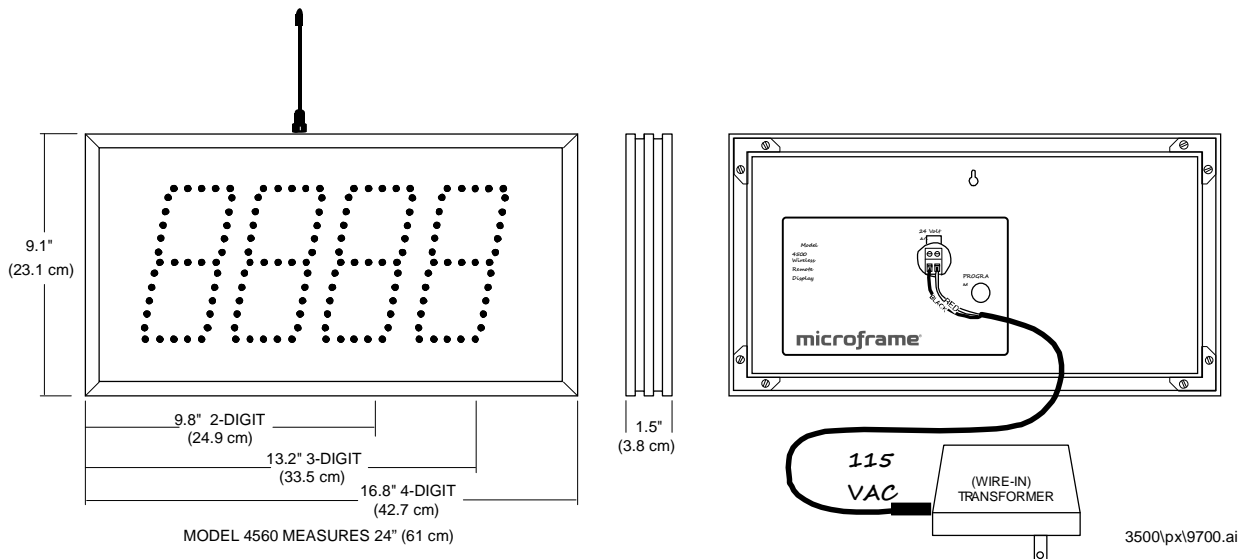

Microframe Corporation
604 South 12th Street
Broken Arrow, OK 74012
800-635-3811
www.microframecorp.com