Microframe Corporation

# microframe MODEL 920, 930 and 940 SPECIFICATIONS **Remote Displays**

#### **Features**


The Model 920, 930 and 940 Displays are designed to work with the 6200 Timer Keypad. Each Display has 5.5 inch tall digits viewable up to 125 feet and is encased in an aluminum extruded cabinet.


### **Operation**

The Remote Display is designed to operate with the Model 904 Keypad or Model 6200 Timer Keypad. The Remote Display receives power and signal from a single cable connected to the Keypad and is turned on or off with the Keypad power switch.



Microframe® Model 940 Display

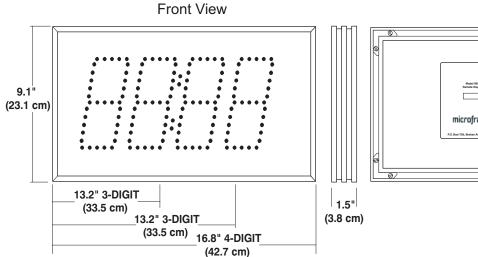

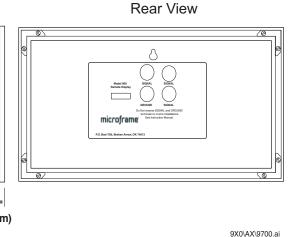

## Model 920, 930 and 940 Specifications

Remote Display ......Wall mount 5.5" LED Display Maximum Distance from Keypad ....2,000 Feet = 1 Display 300 Feet = Full Load of Displays Using 16 AWG Paired Wire Power Input Requirements ......Power Supplied by Keypad Maximum Number of Displays without Booster Amp......Up to twelve 2-Digit; nine 3-Digit and seven 4-Digit Displays Character Height ......5.5 inch (14 cm) Character Viewing Distance ...........150 feet (45 meters) Weight ......2-Digit 2.5 Lbs (1.1 kg); 3-Digit, 3 Lbs (1.4 kg);

4-Digit, 3.5 Lbs (1.6 kg)

# **Support and Sales** 800-635-3811

**Microframe® Corporation**  ${\bf www.microframe corp.com}$ 

P.O. Box 1700 Broken Arrow, OK 74013